


Arzel Zoning Technology, Inc.

Smart Slave™ Installation

Factory Installed with Zone Panel

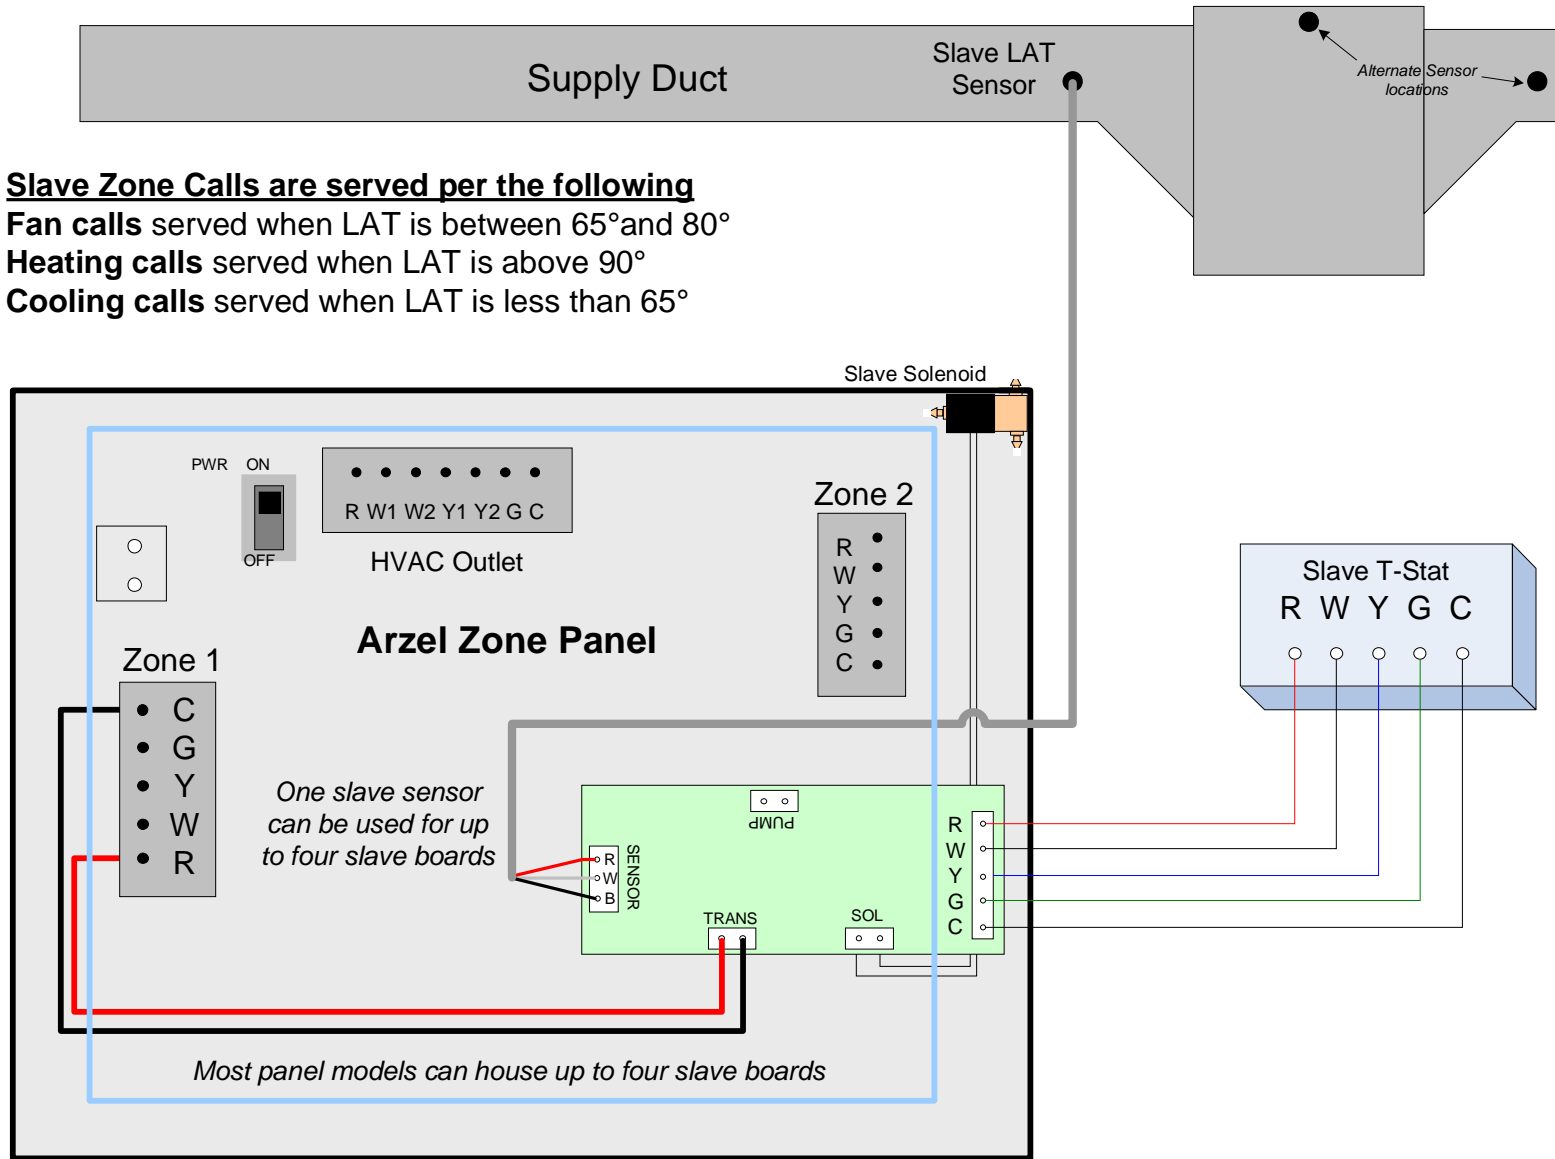

1. Insert the Smart Slave Sensor in the supply duct where it will sense typical discharge air temperatures regardless of what main zone is being served. Typically located next to LAT Sensor of panel
2. Connect a single stage Heat/Cool thermostat to the thermostat terminal block on the smart slave board. (Could be located underneath either the left or right side of the main board)
3. Connect the damper tubing to the Solenoid Port labeled "Slave" on the top of the panel.

Technical Support Hot-Line 1-800-611-8312
www.arzelzoning.com