


Single Stage Heat Pump w/ 1-stg Elect Aux

HP T-Stat at Zone 1

All other thermostats are Basic Single-Stage Heat/Cool Type

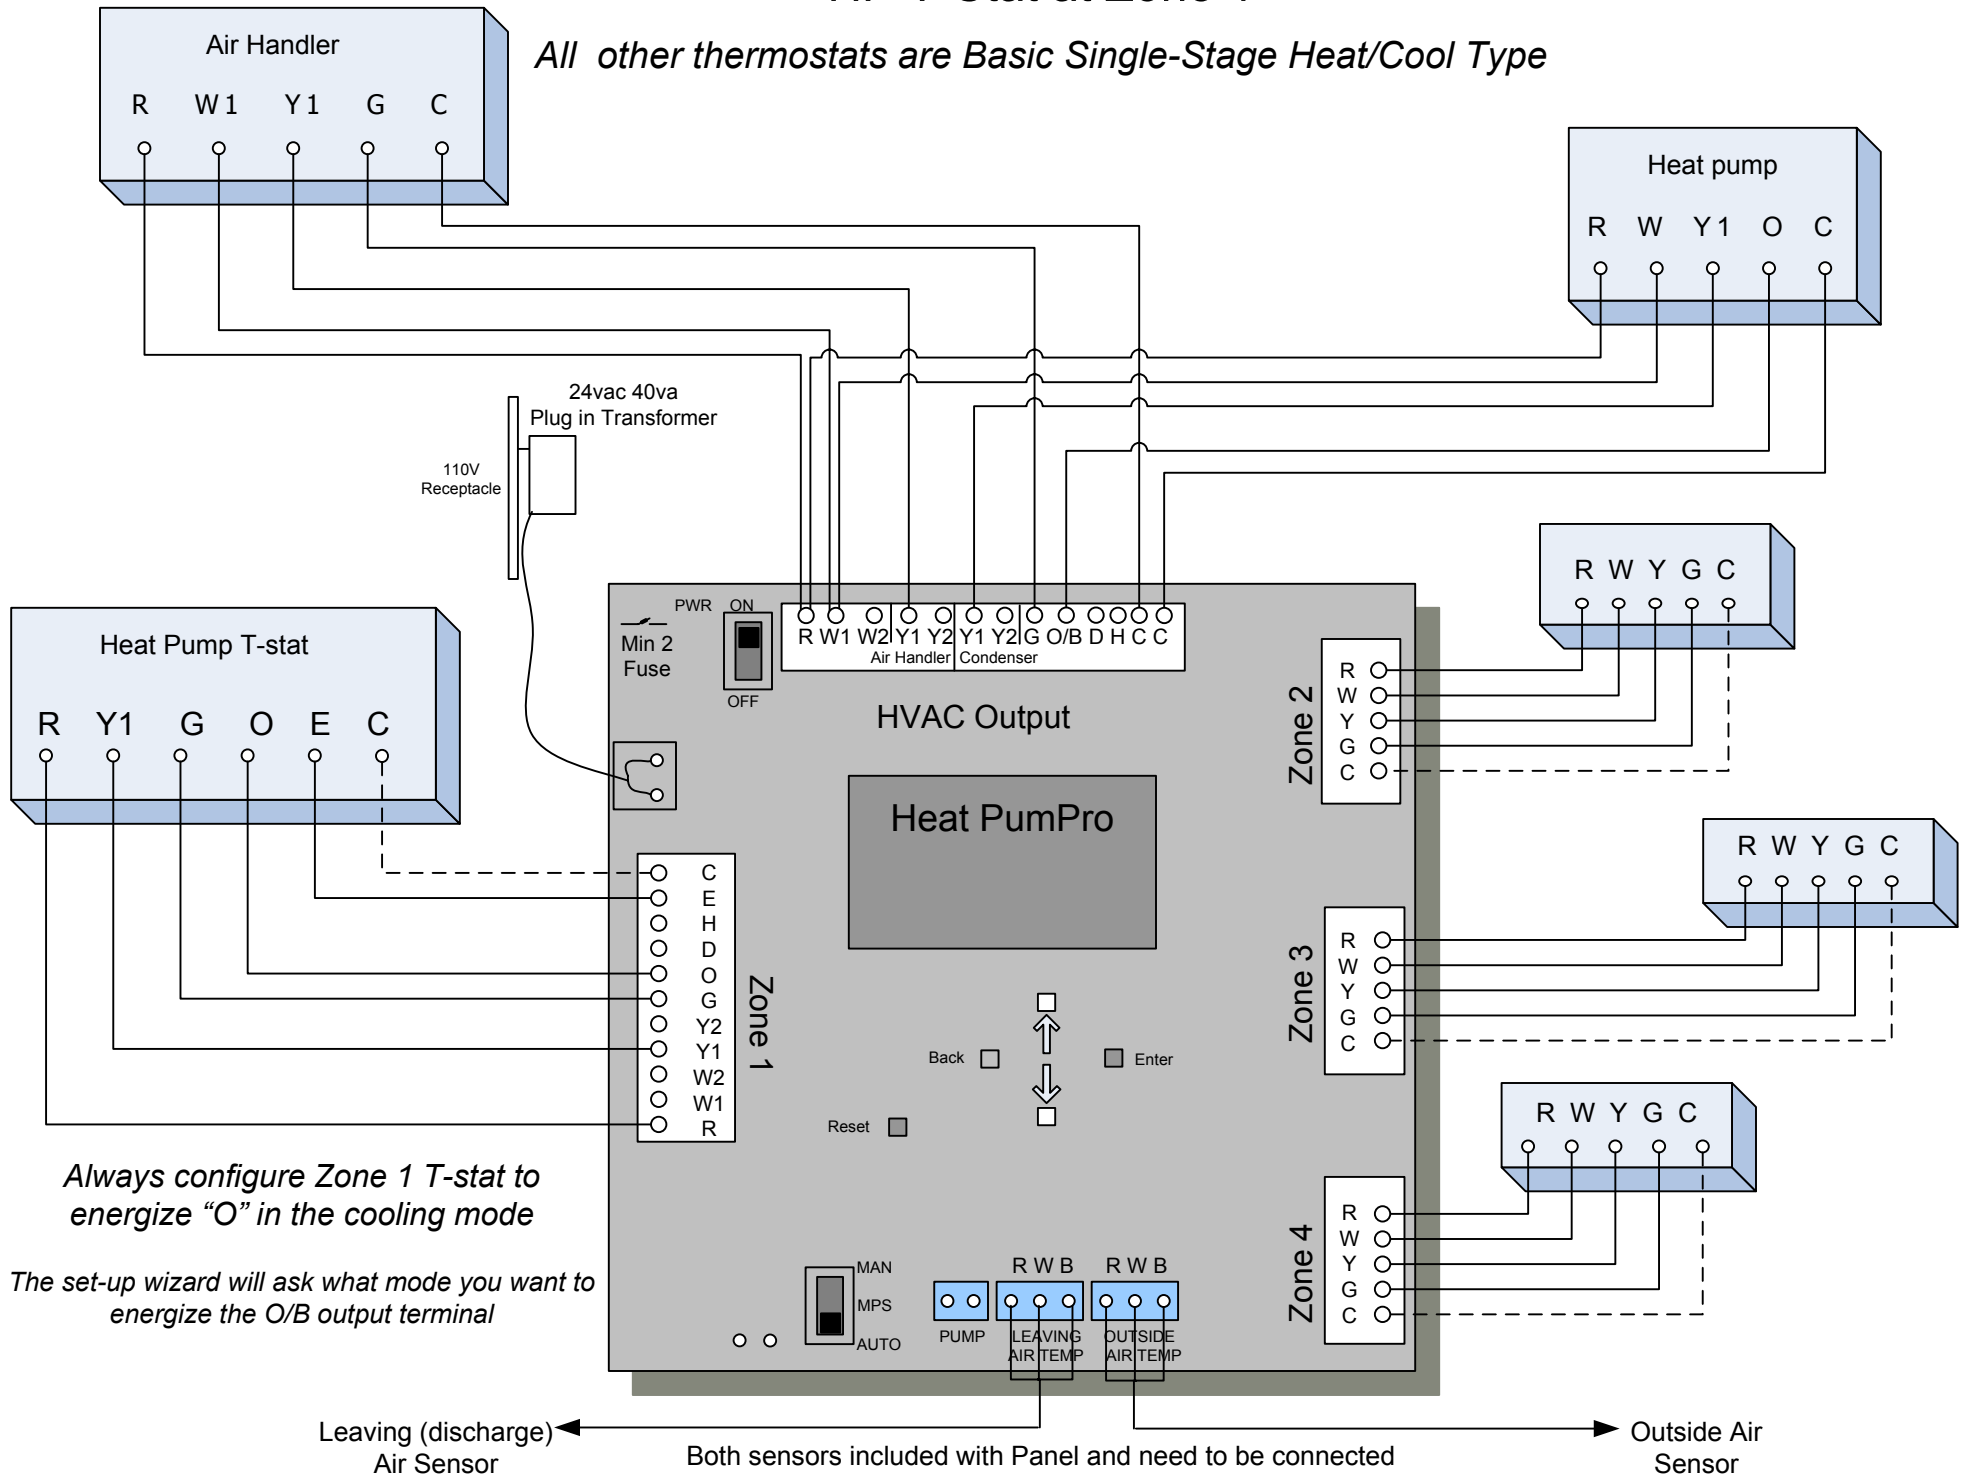

Always configure Zone 1 T-stat to energize "O" in the cooling mode

The set-up wizard will ask what mode you want to energize the O/B output terminal

Leaving (discharge) Air Sensor

Both sensors included with Panel and need to be connected

Outside Air Sensor